
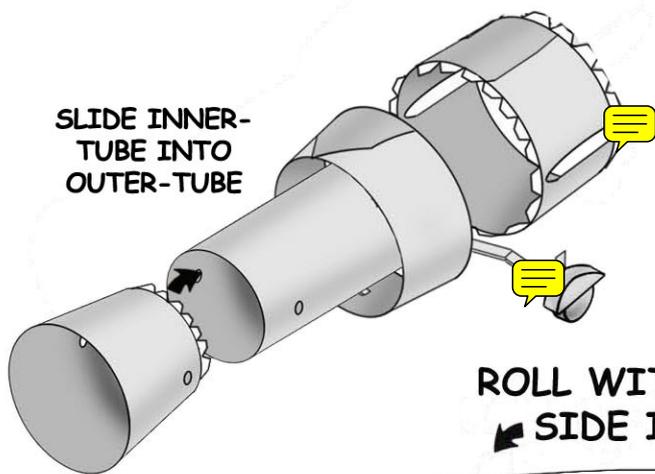


SHEET 2


FUSELAGE TUBE INTERIOR

CONSTRUCTION TIP:


YOU CAN "BOWL" THE LANDING GEAR SPATS BY RUNNING OVER THE END OF A LARGE MARKER WITH YOUR THUMB

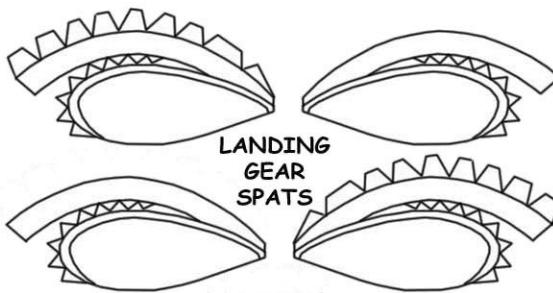

ROLL TREAD TO MATCH DIAMETER OF THE WHEEL PROFILE

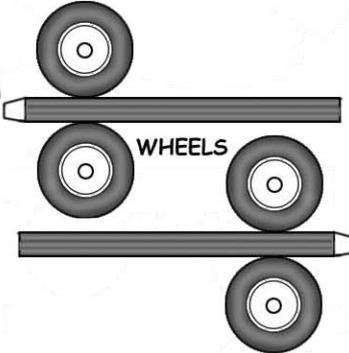

ROLL WITH COLORED SIDE INWARDS

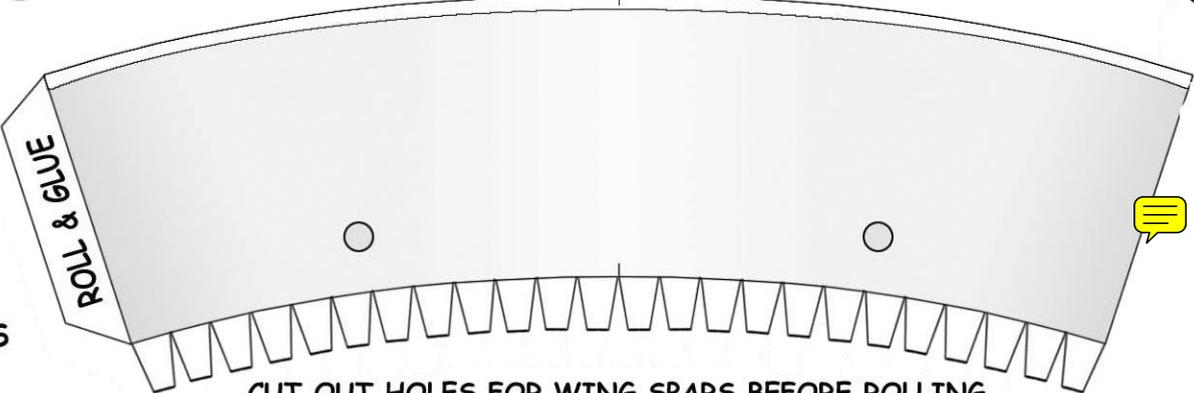

CUT OUT HOLES FOR WING SPARS BEFORE ROLLING

CUT 2 SKEWERS FOR WING SPARS



TAIL WHEEL